

APX 6000 XE Top Display Radio - Program Scan Instructions

- 1) Press and hold the Scan On/Off button until a square box flashes in the display.
- 2) Rotate the “channel” knob to a “channel” you wish to add or delete to your scan list.
- 3) Press the light button (blue) on the side of the radio to add or delete or make a “channel” priority. The **Z** symbol means the “channel” has been added to the scan list. The **Z.** symbol means the “channel” is added with priority.
- 4) To add or delete a channel from another Bank, press the Zone button directly below the Scan ON/Off button until you reach the desired Bank, then rotate the “channel” knob to the “channel” you wish to add or delete to your scan list.
- 5) Press the light button (blue) on the side of the radio to add or delete “channels”. (The **Z** symbol means the “channel” has been added to the scan list.)
- 6) When done making changes turn the Radio Off and back ON.